

VELOX
*one*X



www.noktaengineering.com

USER MANUAL

Thank you for choosing and purchasing our Nokta Velox One detector.

Manufacturing high-tech metal detectors since 2001, Nokta Engineering has played a key role in the development of this sector. Nokta Engineering is particularly known for its technological know-how and professional staff.

Seeking to create different kind of technology, Nokta Engineering offers both high-quality products and services to its consumers all around the world. Nokta Engineering has been operating under the principle that environmental and community responsibility, customer satisfaction and insistence on high-quality are of the utmost importance.

Nokta Engineering aims to remain a leading pioneer in its sector, winning the trust of its consumers and always being the preferred choice for metal detecting.



WARNINGS	3-4
ASSEMBLY	5-8
CORRECT WAY OF HOLDING	9
CORRECT WAY OF SWEEPING	10
BATTERY	11
DEVICE INTRODUCTION	12
CONTROLS	13-16
TURNING ON THE DEVICE	13
GROUND BALANCE	13-14
SENSITIVITY	14
IRON DISCRIMINATION	15
IRON SWITCH	15
MINERAL MODES	16
SIGNAL AUDIO BOOST	16
SEARCHING AND METAL DETECTION	17

WARNINGS!

LEGAL WARNINGS

▶ When using the device, comply with all applicable laws and regulations. Do not use the device in private premises, historic sites and military zones. Notify the authorities of any historical or cultural findings.

WARNINGS ABOUT THE DEVICE

- ▶ This is a high-tech electronic device. Do not assemble or use the device before reading the user manual.
- ▶ The battery used in the device is specifically designed for Velox One. Do not use any other battery. Before using the battery, you must read all instructions and warnings in the user manual.
- ▶ Do not expose the device or the search coil to very hot or cold conditions for extended periods of time.
(Storage Temperature: 0°C (32°F) - 40°C (104°F))
- ▶ Do not immerse the device or its accessories (except the search coil) in water; do not expose them to extreme humid conditions.
- ▶ Protect the device from external impact, especially during transportation.
- ▶ The device can only be opened and repaired by authorized service technicians. The warranty will be voided if the device is opened by you or an unauthorized person.

IMPORTANT

Do not use the device indoors. The device will constantly give target signals inside places like homes where there are many metals present. Use the device outdoors, in open fields.

Do not let another detector or an electromagnetic device come in close proximity (10m (33ft.)) to the device.



IMPORTANT

Do not carry any metal objects while using the device. Keep the device away from your shoes while walking. The device may detect the metals on you or inside your shoes as targets.



For Consumers within the European Union: Do not dispose of this equipment in general household waste. The crossed wheeled bin symbol on this equipment indicates this unit should not be disposed of in general household waste, but recycled in compliance with local government regulations and environmental requirements.




This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.




- 1) System Box
- 2) Handle and S-Rod
- 3) Search Coil
- 4) Search Coil Cover
- 5) Upper Shaft
- 6) Extension Shaft
- 7) Wingnut, Fastening Screw and Washers
- 8) Battery
- 9) 110/220 Volt Charger
- 10) Headphones




Coil cover use is optional. It protects the search coil from scratches. If you want to use the cover, attach the cover to the coil and press firmly on the edges to secure.

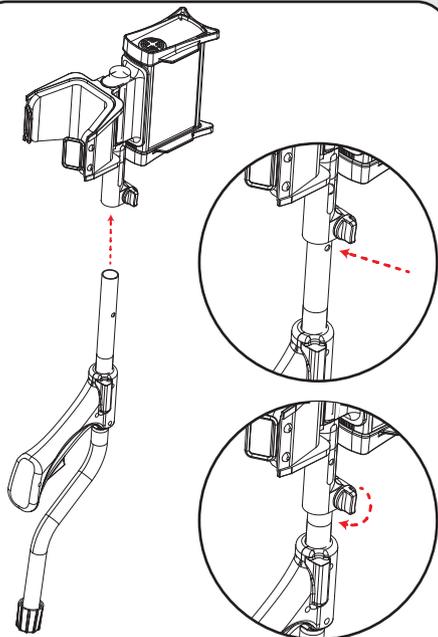


Holding the metal pin pressed, insert the S-rod into its place underneath the system box and secure it by tightening the wingnut as shown in the picture.

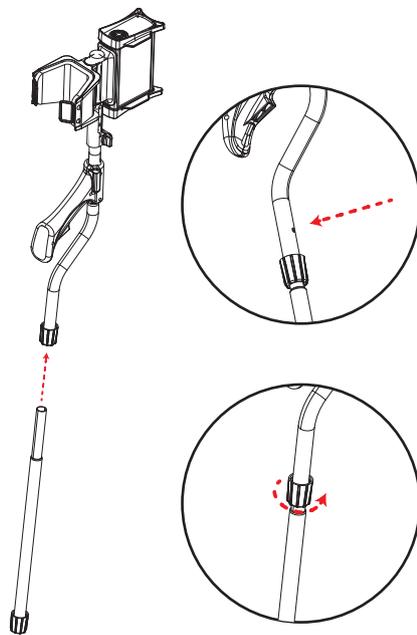


Again by holding the metal pin pressed, insert the upper shaft into the S-rod and click the pin into its hole. Then, secure it by tightening the twist lock.

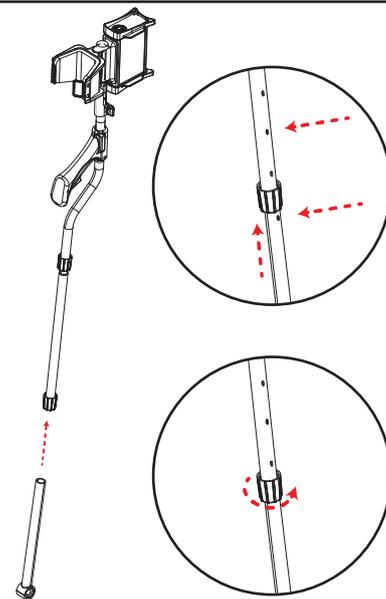


Insert the extension shaft into the upper shaft holding the metal pin pressed and adjust the height by clicking the pin into one of the holes. Then, secure it by tightening the twist lock again.

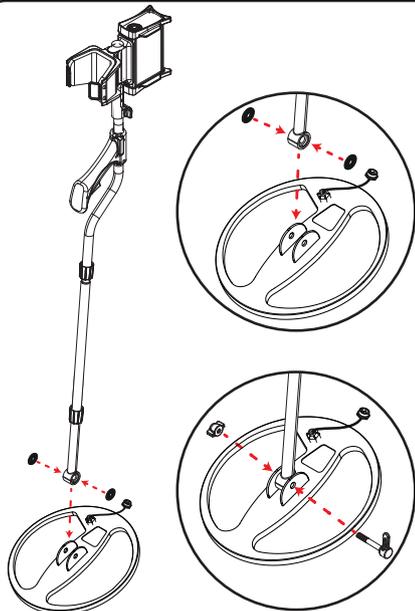


Place the washers into the openings on both sides at the end of the extension shaft. After placing the shaft on the coil as shown in the picture, insert the fastening screw through the hole and tighten it using the wingnut.

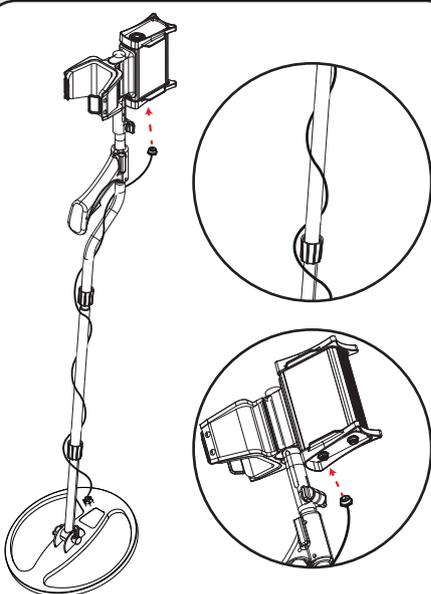

Wrap the coil cable around the shaft all the way up as shown in the picture and after inserting it in the coil input socket underneath the system box, secure it by twisting the connector. Pay attention to not wrap the cable too tight during this step.

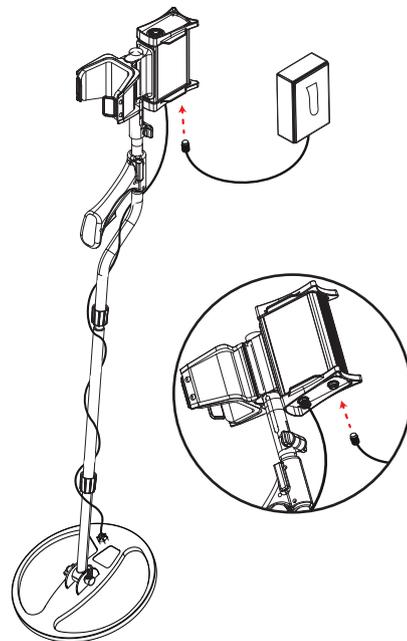

Plug the battery cable into the battery input socket underneath the system box and tighten securely.

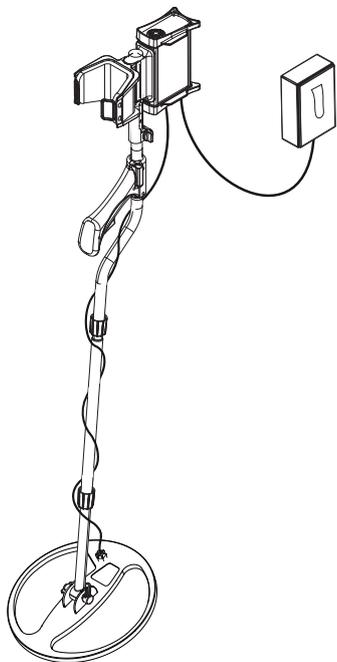

Assembly is completed.

You may use the battery by attaching it to your waistband as shown in the picture or to the side of the system box using the optional battery case.



CORRECT WAY OF HOLDING








Shaft height is wrong.

It is very important to adjust the shaft to your height correctly to be able to search without discomfort and fatigue.



Shaft height is correct.

Adjust the height of the shaft so that you are standing in an upright position, your arm is relaxed and the search coil is approximately 5cm (~2") above the ground.

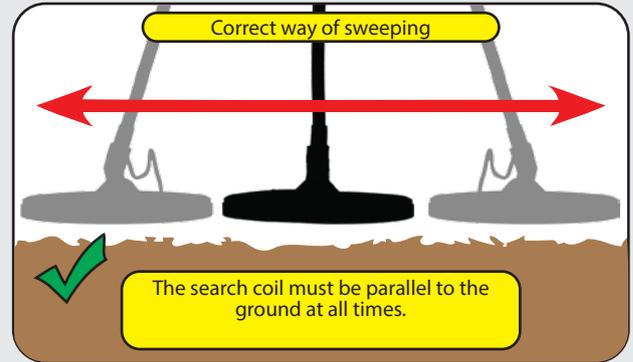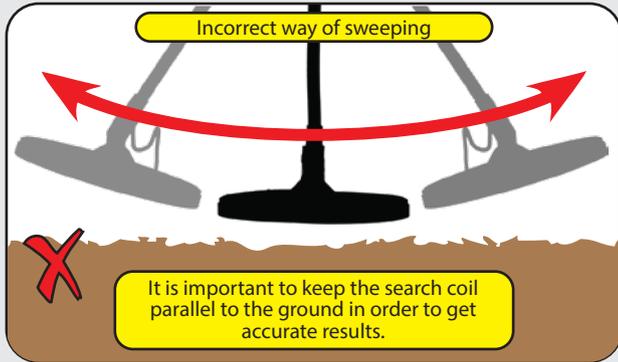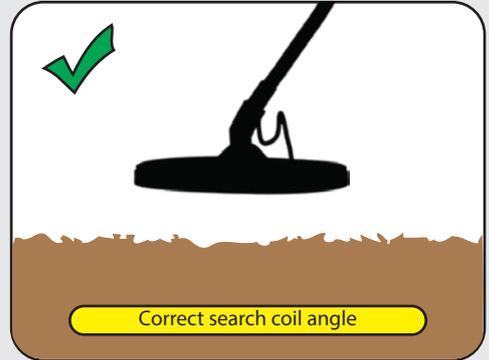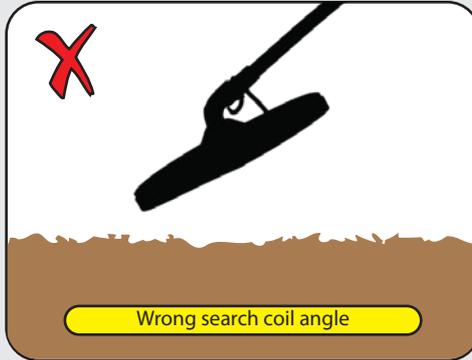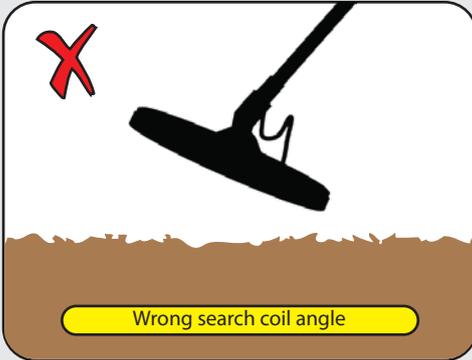

CHARGING THE BATTERY

The battery pack consists of an 11.1V Lithium-Polymer battery and a charging circuit. The device comes with a 110/220V AC charger. When fully charged, the battery will provide approximately 25-30 hours of use. The charger will recharge an empty battery in approximately 5-6 hours. You don't need to fully discharge the battery before recharging.



To charge the battery, insert the power cable jack into the socket on the side of the battery and plug the power cable into a 110/220 Volt wall outlet. The LED on the charger will light up red while charging. When charging is complete, it will turn green. This LED will also light up green if the charger is plugged into an outlet without the battery installed in it.

To see the battery life status, press and hold the (*i*) button and check the battery life indicator. When the battery is full, 3 LEDs will light up. When only a single LED is lit, it means that the battery is almost empty.

IMPORTANT

- ▶ The battery is specifically designed for Velox One. Do not use any other battery.
- ▶ You must charge the battery for approximately 8 hours before first use.
- ▶ When the battery is fully discharged, charge it as soon as possible. If you will not use the battery for a long time, charge it before you store it. The maximum storage time should not exceed 30 days. If you will not use the battery for a longer period of time, charge the battery at least once every 30 days.
- ▶ Do not charge the battery at temperatures above 45°C (113°F) or below 0° C (32°F).
- ▶ Do not leave the battery in very hot or cold conditions.
- ▶ Do not expose the battery to water and do not leave it in very humid conditions.
- ▶ Do not expose the battery to fire.
- ▶ Do not throw the battery; protect it from impact.
- ▶ Do not short-circuit the battery.
- ▶ Do not use the battery if it is damaged or deformed.
- ▶ Do not disassemble the battery.

SENSITIVITY

IRON DISC.

GROUND BALANCE

IRON

OFF ON

SIGNAL AUDIO

1 2 3

Battery

Mineral 3

Mineral 2

Mineral 1

Off

On


Coil

Speaker

Headphone Input

Volume

TURNING ON THE DEVICE

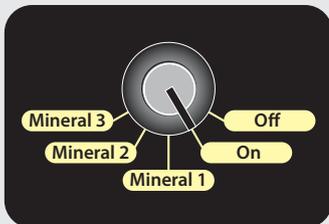


To turn on the device, rotate the On/Off knob to ON. Turn the same knob to OFF position when you want to turn off the device. When the device is turned on, a melody will be heard and approximately 10 seconds later you will hear a long beep indicating that the device is ready to use.

The device will provide more depth at on position. However, to better discriminate ferrous metals, using the device in mineral modes and the iron discrimination at maximum position is recommended.

GROUND BALANCE



Especially in mineralized ground target signal is negatively affected by the "noise" caused by ground mineralization. This situation may prevent the detector from getting a clean signal from the target necessary for metal detection and accurate discrimination. Ground balancing is a process through which the metal detector is able to cancel out the negative effects caused by ground mineralization.

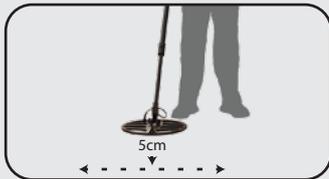

To ground balance, holding the search coil 5cm. above the ground, sweep it right and left, keeping it parallel to the ground and slowly turn the ground balance knob clockwise until the noise is gone and the device is silent. If you cannot ground balance the detector, gradually decrease the sensitivity and repeat the above steps.




For maximum depth, do not turn the ground balance knob to the right more than necessary. Generally speaking, the mid-level (between 4-7) offers the most ideal and stable detection capability on different types of ground without sacrificing depth.

As the ground balance goes into the right area, the device will start losing depth for some non-ferrous metals except for gold. When the ground balance setting reaches the maximum point the device will detect iron and gold but it will not detect some non-ferrous metals.

If you are searching on a ground loaded with mineralized stones or dips and holes, it is recommended to ground balance over one of these stones or the holes.

In areas of very high mineralization, ground balance may not be sufficient. In such a case, you may need to use the mineral search modes (see page 16).

SENSITIVITY

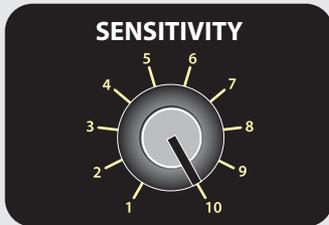

Sensitivity setting is used to eliminate interferences caused by electromagnetic waves in the surrounding environment or ground noise. Electromagnetic waves may result from power lines in the surrounding environment or from the operation of electrical devices, radars, wireless radios, and even TVs.

Sensitivity is also the depth setting for the device. Therefore, especially in high mineralization, it is recommended that you lower it only if the device is still getting noise after you adjust all the other settings (ground balance, iron discrimination and mineral modes).

IRON DISCRIMINATION



This setting is designed for tough ground conditions and experienced users. For normal ground conditions or if you do not want to bother with this setting it is recommended that you keep it at the factory setting (FS).

This setting has 2 main purposes:

1) Especially in areas of high iron mineralization and wet beach sand you may not be able to ground balance the device. In such a case, you can use iron discrimination. By turning the iron discrimination knob to the right, you can enable the ground effect to be reflected as iron and eliminate it by turning the iron switch off.

In general, when searching in wet salt water beach sand, the most ideal settings are the maximum level of the iron discrimination, iron switch off and mineral 2 or 3 modes. You can also use these settings when searching in wet plowed land with high iron effect.

2) It enables metals containing iron to produce a low tone and to be discriminated more easily. Discrimination starts at about level 4 - 6. Below this level, all metals including iron will produce a non-ferrous (high) tone and generally speaking the device will perform at its maximum depth. In addition, iron switch will not be active below this level.


IRON SWITCH



When you want to avoid detecting ferrous metals you can turn the iron switch off and enable the device to eliminate these metals and not produce a warning tone.

NOTE: Many metals considered to be trash may not produce a ferrous metal signal. For example, pull tabs may be sensed as a non-ferrous metal by most detectors because their signal is very similar to that of gold.

MINERAL MODES

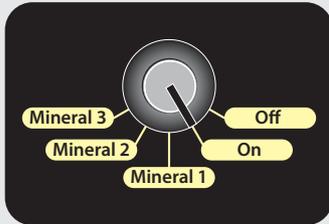

Mineral Modes: If you are searching on high mineralized ground (extremely salty soil, wet beach sand, wet plowed land or highly magnetic ground conditions) you may not be able to ground balance the device. In such a case, first turn the On/Off knob to mineral 1. If the device is still getting noise, turn it to mineral 2 or mineral 3. This will eliminate the noise and false signals caused by mineralization. However, you may experience a decrease or fading in the signal obtained from certain metals at maximum depths.

As mentioned before, especially on grounds with high iron content such as wet salt water beach sand and wet plowed land, it is recommended that you search in mineral 2 or 3 mode, bring the iron discrimination to maximum level and turn the iron switch off.

SIGNAL AUDIO BOOST




The signal audio boost switch boosts the sound of weak signals received from small or deep metals making it easier for you to detect those uncertain targets.

At position 1, the booster is off. At 2, the signal audio will be higher and at 3, it will be heard at its maximum.

Please note that signal audio boost should be used on a temporary or as-needed basis because it will not only boost the target signal audio but it will also boost the loudness of ground noise and false signals. Therefore, it is recommended to keep the switch at position 1 and turn it to position 2 or 3 only when you want to verify a weak metal signal and then turn it off again.

SEARCHING AND METAL DETECTION

SEARCHING AND METAL DETECTION

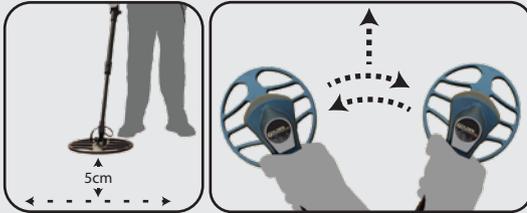

After the settings are adjusted, you can start searching by lifting the search coil 5cm. above the ground and sweeping it right and left, keeping it parallel to the ground.

The device operates on the principle of motion. This means that you must move the search coil over the target or the target over the search coil, in order for the device to see it. In other words, metal detection is not possible without moving the search coil.

To avoid missing smaller and deeper targets, sweep the search coil both from right to left and left to right over each area you are scanning, slightly overlapping the sweeps as you move forward.

When the device detects metal, it will produce an audible tone.

The device has 3 tone audio discrimination. The lower tone is for ferrous metals. For non-ferrous metals and gold, the device produces 2 very similar high tones. In case of alloy detection the device may produce a high-low double-tone sound. In order to get familiar with the different tones of your device, it is recommended that you practice with different types of metals and identify the sounds before you use it out in the field.

NOTE: Discrimination, just like in any other metal detector, may not always be 100% accurate. There are many different factors affecting discrimination accuracy. All metals based on their conductivity, shape, orientation underground, depth and ground mineralization are sensed differently by a detector. Oxidized metals buried under ground for a long time such as tinplates and tins may produce gold like signals.

Following the experienced metal detector users' rule of thumb "when in doubt, dig" is the right thing to do.

Operating Principle: Induction Balance

Operating Frequency: 17.5 KHz

Metal Identification: Audio warning

Audio Discrimination: 3 tones

Sensitivity Setting: Manual

Ground Balance: Manual

Search Coil: 28cm (11") waterproof Double-D

Battery: Rechargeable Lithium Polymer

Headphone Output: 1/4" mono

Length: 125-145cm (49"-57") extendable

Weight: 2.0kg (4.4lbs) including the search coil

Warranty: 2 years



Emek Mah. Sivatyolu Cad. Sakiz Sok. No: 4
34785 Sancaktepe - Istanbul / Turkey
Phone : +90 216 415 56 86
Fax : +90 216 415 63 43
E-mail: info@noktaengineering.com

